
4SAFE

Door controller without test

In case of older door controllers (without test) with **alternating current voltage (AC)**, the test function of the 4SAFE must be deactivated:

- 1. Set DIP-schitch 3 to "ON" (+ confirm by pushing the grey button for at least 3 sec.)
- 2. Enter the following sequence by remote control:

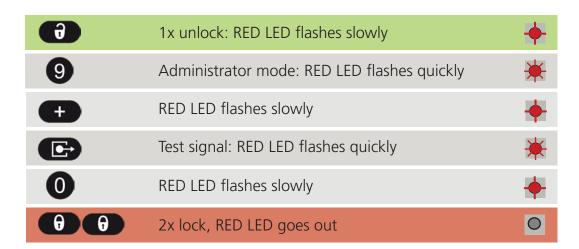

Attention: you have entered the administrator mode. Please be careful not to press any other buttons!

3. The BLUE and RED wires should not be connected.

In case of older controllers (without test) with **direct current (DC)**, connect the RED wire to "+" and the BLUE wire to "-" of the power supply.

