

Download the BEA DECODER app for a quick overview of settings






IXIO-D01 I

OPENING & PRESENCE SENSOR FOR AUTOMATIC INDUSTRIAL DOORS

User's Guide for software version 0501 and higher (refer to tracking label on product)

DESCRIPTION

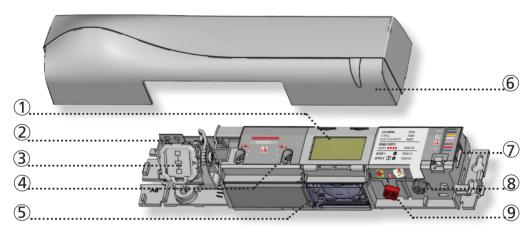

- 1. LCD
- 2. radar antenna (narrow field)
- 3. radar antenna (wide field)
- 4. IR-curtain width adjustment
- 5. IR-lenses

- 6. cover
- 7. main connector
- 8. main adjustment knob
- 9. IR-curtain angle adjustment knob

ACCESSORIES



BA: Bracket accessory



CA: Ceiling accessory



RA: Rain accessory



CDA: Curved door accessory



9 V battery

HOW TO USE THE LCD? -

DISPLAY DURING NORMAL FUNCTIONING



Opening impulse



Negative display = active output





To adjust contrast, push and turn the grey button simultaneously. During normal function only.

FACTORY VALUE VS. SAVED VALUE _____



displayed value = factory value



displayed value = saved value

NAVIGATING IN MENUS _



Push to enter the LCD-menu



Enter password if necessary

Not during the first minute after power-on of the sensor.



Select your language before entering the first LCD-menu.

During the first 30 seconds after power-on of the sensor or later in the diagnostics menu.





Select Back to return to previous menu or display.



Select More to go to next level:

- basic settings
- advanced settings
- diagnostics

CHANGING A VALUE



menu

up-down





Push to select parameter



displayed



Scroll values up-down



more values are displayed



Push to save new value



new value is displayed

CHANGING A ZIP CODE



See application note on ZIP CODE



ZIP code E24 1 56 KG4 01 0 800 02F



ZIP coc E24 1 0108



















Validate the last digit in order to activate the new ZIP code:

- v = valid ZIP code, values will be changed accordingly
- x = invalid ZIP code, no values will be changed
- -v/x = valid ZIP code, but from a different product. Only available values will be changed.

VALUE CHECK WITH REMOTE CONTROL _







Pressing a parameter symbol on your remote control, displays the saved value directly on the LCD-screen. Do not unlock first.


IXIO-DO1 I: INSTALLATION GUIDE

1 MOUNTING & WIRING

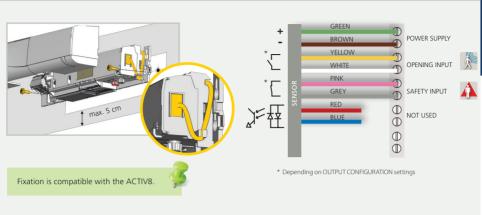


2 RADAR OPENING IMPULSE FIELD

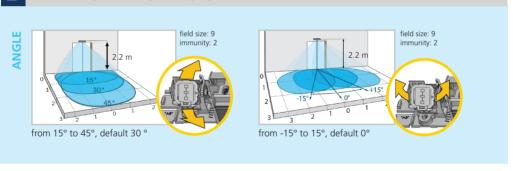


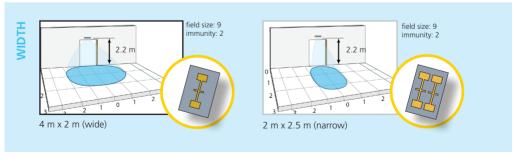

The size of the detection field varies according to the mounting height of the sensor.

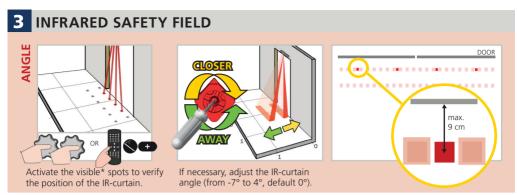


* Visibility depends on external conditions. When spots are not visible, use the Spotfinder to locate the curtains.

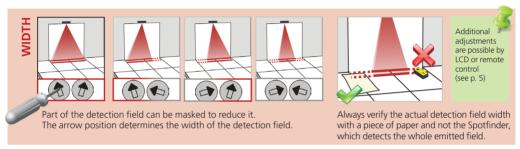


The size of the detection field varies according to the mounting height and the settings of the sensor.

The full door width must be covered.



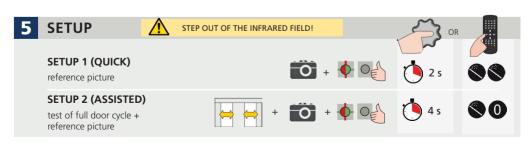

OVERVIEW OF SETTINGS

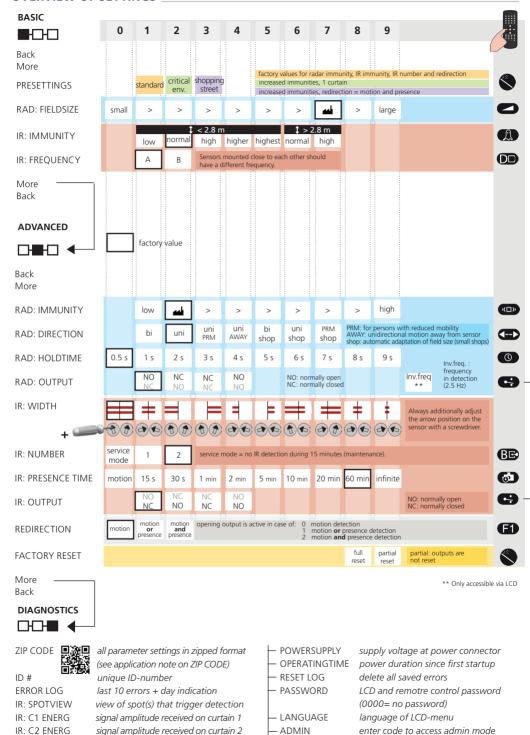

TROUBLESHOOTING _____

E1 -	ORANGE LED flashes 1 x.	The sensor signals an internal fault.	1 Replace sensor.
E2 2	ORANGE LED flashes 2 x.	The power supply is too low or too high.	1 Check power supply (in the diagnostics menu of the LCD). 2 Check wiring.
E4 4	ORANGE LED flashes 4 x.	The sensor receives not enough IR-energy.	 Decrease the angle of the IR-curtains. Increase the IR-immunity filter (values >2.8 m). Deactivate 1 curtain.
E5 5	ORANGE LED flashes 5 x.	The sensor receives too much IR-energy.	1 Slightly increase the angle of the IR-curtains. 2 Decrease the IR-immunity filter (values 1-3 <2.8 m).
		The sensor is disturbed by external elements.	1 Eliminate the cause of disturbance (lamps, rain cover, door controller housing properly grounded).
E8 -8	ORANGE LED flashes 8 x.	IR power emitter is faulty.	1 Replace sensor.
	ORANGE LED is on.	The sensor encounters a memory problem.	1 Cut and restore power supply. 2 If orange LED lights up again, replace sensor.
*	RED LED flashes quickly after an assisted setup.	The sensor sees the door during the assisted setup.	 Move the IR-curtains away from the door. Install the sensor as close to the door as possible. If needed, use a bracket accessory. Launch a new assisted setup.
	RED LED lights up sporadically.	The sensor vibrates.	 Check if the sensor is fastened firmly. Check position of cable and cover.
		The sensor sees the door.	1 Launch an assisted setup and adjust the IR angle.
		The sensor is disturbed by external conditions.	 Increase the IR-immunity filter to value 3. Select presetting 2 or 3.
	GREEN LED lights up sporadically.	The sensor is disturbed by rain and/or leaves.	Select presetting 2 or 3. Increase radar-immunity filter.
		Ghosting created by door movement.	1 Change radar field angle.
		The sensor vibrates.	 Check if the sensor and door cover is fastened firmly. Check position of cable and cover.
		The sensor sees the door or other moving objects.	1 Remove the objects if possible.2 Change radar field size or angle.
	The LED and the LCD-display are off.		1 Check wiring.
	The reaction of the door does not correspond to the LED-signal.		Check output configuration setting.Check wiring.
	The LCD or remote control does not react.	The sensor is protected by a password.	1 Enter the right password. If you forgot the code, cut and restore the power supply to access the sensor without entering a password during 1 minute.

LED-SIGNAL











LED flashes red-green



LED flashes quickly



LED is off

INSTALLATION



The sensor should be fixed firmly to avoid extreme vibrations.



Do not cover the sensor.



Avoid moving objects and light sources in the detection field.



Avoid highly reflective objects in the infrared field.

MAINTENANCE



It is recommended to clean the optical parts at least once a year or more if required due to environmental conditions.



Do not use aggressive products to clean the optical parts.

SAFETY



The door control unit and the door cover profile must be correctly earthed.



Only trained and qualified personnel may install and setup the sensor.



Always test the good functioning of the installation before leaving the premises.



The warranty is invalid if unauthorized repairs are made or attempted by unauthorized personnel.



- The device cannot be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the sensor.
- The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the sensor cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.

TECHNICAL SPECIFICATIONS

		power source ensuring double insulation between pri-	
Supply voltage:	12 V - 24 V AC +/-10% ; 12 V - 30 V DC +/-10%	mary voltages and the Equipment supply. The supply	
Power consumption:	< 2.5 W	current should be limited to max 3A.	
Mounting height: 2 m to 4 m			
Temperature range:	-25°C to +55°C; 0-95% relative humidity, non condensing		
Degree of protection:	IP54		
Noise:	< 70 dB		
Expected lifetime:	20 years		













* The Equipment must be powered by a SELV limited

Detection mode:	Motion Min. detection speed: 5 cm/s	Presence Typical response time: < 200 ms (max. 500 ms)
Technology:	Microwave doppler radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm ²	Active infrared with background analysis Spot: 5 cm x 5 cm (typ) Number of spots: max. 24 per curtain Number of curtains: 2

Specifications are subject to changes without prior notice. All values are measured in specific conditions and with a temperature of 25°C.







BEA hereby declares that the IXIO-DO1 I is in conformity with European directives 2014/53/EU (RED) and 2011/65/EU (RoHS).

The complete declaration of conformity is available on our website.